



Arani is committed to same day shipping on orders before 3pm*.

GET YOUR PRODUCTS FAST

Date:

Project:

Prepared for:

Type:

Comments:



Motion
Sensor
Switches

Motion Sensor Switches



1 Year



Suitable for use in dry locations



MS1-15A-W-NL-WH-V1



MS1-15A-W-L-WH-V1

SPECIFICATIONS

180° detection Range

Hold Time: 5sec-5min

Functioning Temperature: 0°C to 40°C

Copper wiring only

AVAILABILITY

120VAC

Auto Mode / Manual Mode



*This icon indicates a STOCK item:

Look for this Same Day Shipping icon below in 'Ordering Information' for products that ship on the same day (orders placed before 3pm) from Montreal, Quebec or Calgary, Alberta



Motion Sensor Switch

MS1-15A-W-NL-WH-V1

MS1-15A-W-L-WH-V1

TWO OPERATION MODES

A	Auto	Auto ON, Auto OFF
M	Manual	Manual ON, Manual OFF



AUTO MODE (A)

MS1-15A-W-xx-WH-V1 switches the light ON for 15s after any movements is detected.

MANUAL MODE (M)


The light switches ON by MS1-15A-W-xx-WH-V1 and OFF by pressing the power button.

ORDERING INFORMATION

SERIES	FINISH	TYPE	ORDERING CODE
MOTION SENSOR SWITCHES	WHITE	WITH NEUTRAL	MS1-15A-W-NL-WH-V1 
		WITHOUT NEUTRAL	MS1-15A-W-L-WH-V1 



DETECTION AREA

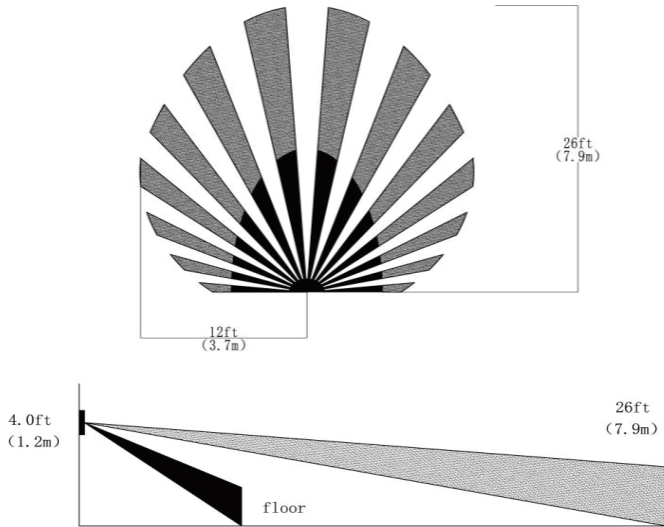

The detection area is measured under the best temperature condition of 20°C to 25°C. A higher temperature may not lead to an ideal detection area.

SENSOR ADJUSTMENT & PROGRAMMING



Remove the cover below the sensor lens by inserting a small screwdriver into the notch on the bottom of the cover. Gently lift the screwdriver to unlatch cover.

LED Indicator

It is on while the controlled load is OFF. It is off while the controlled load is ON.

Sensitivity Setting ("SENS")

Sensitivity can be increased by turning the knob clockwise.

Ambient Light Level Setting ("LUX")

It is used to detect if other light sources, such as sunlight, are sufficient to illuminate the space without turning on the light. To activate the ambient light level, please turn the "SENS" knob counterclockwise. To deactivate the ambient light level, please turn the "SENS" knob clockwise to (+). The sensor will turn the light on and off regardless of ambient light conditions.

Hold Time Setting ("TIME")

Fully turn the knob counterclockwise to the minimum setting (5s) and clockwise to the maximum setting (5min).

